


check and foot val


ball vai bibco

strair pressurereducing val

heat

fittir accessories for solar heating syste

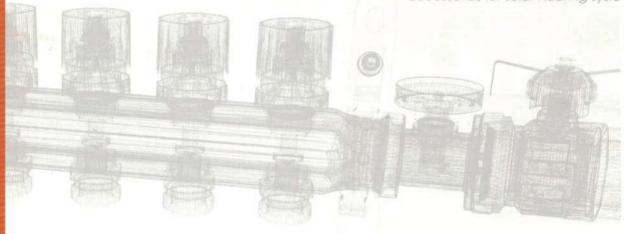


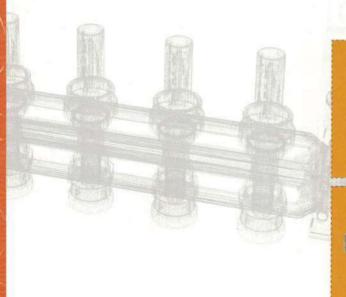







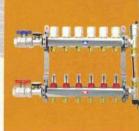

multi-fit



THE SIMPLE, FAST AND MONEY SAVING SYSTEM FOR MULTILAYER, PEX AND POLYBUTYLENE PIPE

Supplied with an O-ring for conical seats and a washer for flat seats. - Nut in nickel-plated brass. - Maximum working pressure: 20 bar. Threads: ISO228 (equivalent to DIN EN ISO 228 and BS EN ISO 228).



Tail in brass. Minimum and maximum working temperatures: -20°C, 110°C.

	3/4" NUT EUROKONUS	
	14x2	
1/2* NUT	15x2,5	
14x2	16x2	
15x2,5	16x2,25	
16x2	17x2	
16x2,25	18x2	
17x2	18x2,5	
18x2	20x2	
18x2,5	20×2,25	1" NUT
20×2	20x2,5	25x2,5
20x2,25	25×2,5	26x3
20x2,5	26x3	32x3



Tail in polymer.

1/2" NUT	3/4" NUT EUROKONUS
16X2	16X2
20X2	20X2

brand new

FOUR SIMPLE STEPS FOR A SAFE INSTALLATION 2



- Cut the pipe by a pipe cutter.
 Deburr the inner side of the pipe.
- 3. Insert the fitting into the pipe.4. Once the threaded part of the fitting reaches the pipe, screw the tail into the pipe was far as the thread has completely entered the pipe.




The fittings are supplied with an o-ring for conical seats and a flat washer for flat seats.



2013

multel-fite system

MANIFOLD WATER DISTRIBUTION SYSTEM

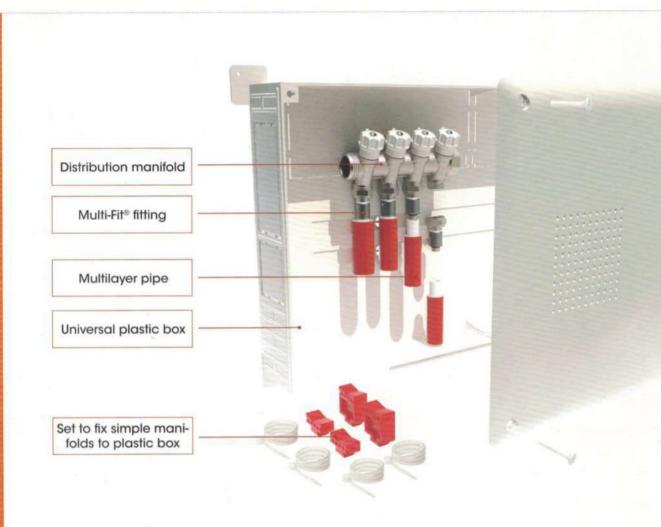

NO MORE BUILD-IN T AND ELBOW JUNCTIONS

NO MORE LEAKAGES

REALLY MAKE THE MOST OF MULTILAYER PIPING FLEXIBILITY AND INSTALLATION SPEED

IMPROVE THE WATER FLOW

MAKE REPAIRS EASY AND FAST

EACH ENDPOINT CONNECTED TO A SINGLE MANIFOLD OUTLET



THE PUSH-FIT FITTINGS THAT BEAT EVERY RECORD. ONE SINGLE FITTING FOR THREE DIFFERENT PIPES: COPPER, PEX AND POLYBUTYLENE
















SUITABLE FOR HEATING AND SANITARY SYSTEMS

NO NEED OF SPECIAL OR EXPENSIVE TOOLS FOR THE INSTALLATION

REVERSIBLE INSTALLATION



FOUR SIMPLE STEPS FOR A SAFE INSTALLATION


1. Cut the pipe by a rotary pipe cutter.
2. Deburr the external surface of the pipe.
3. Insert the pipe in the depth gauge and mark the pipe.
4. Insert the pipe by pushing it as far as it reaches the blocking point, that should correspond to the mark made before. If you are using cross-linked polyethylene pipes (PEX) or polybutylene pipes you have to insert the liner before the connection.


5. To disconnect the fitting you just need to push the release lines by

5. To disconnect the fitting you just need to push the release liner by the lever or the clip and at the same time pull the pipe.



STAINI ESS STE

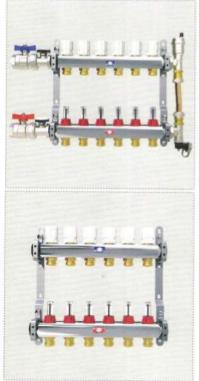

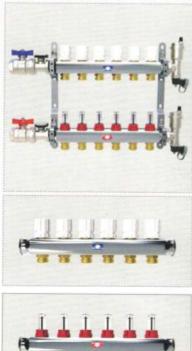



Hose bibcock, with mobile connection



AVAILABLE SIZE 1/2"X3/4".

PAT. PEND.

HEAVY MODEL. HIGH RESISTANCE AGAINST FREEZE.

Body in nickel-plated brass.

Hose connection in nylon.


Lever handle in alluminium.

Minimum and maximum working temperatures: -20°C, 80°C.

Threads: ISO228 (equivalent to DIN EN ISO 228 and BS EN ISO 228).



360° turn. It avoids the garden hose flattening.

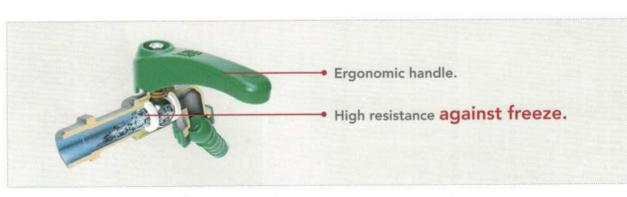

HEAD OFFICE

ITAP s.p.a.
Via Ruca 19
25065 Lumezzane
Brescia (ITALIA)
Tel. 030 89270
Fax 030 8921990
www.itap.it - info@itap.it

WAREHOUSE

ITAP s.p.a. Via Industriale 39 Zona Industriale Moie 25050 Rodengo Saiano Brescia (ITALIA)

www.vosoughishop.com

دفتر مرکزی: مشهد، بین قرنی ۳۱ و ۳۳ تلفین: ۱ - ۱ - ۳۷۱۳ م ۱ - ۵ ه