

check and foot vai


ball vai


bibco strair

pressurereducing val

heat fittir

accessories for solar heating syste

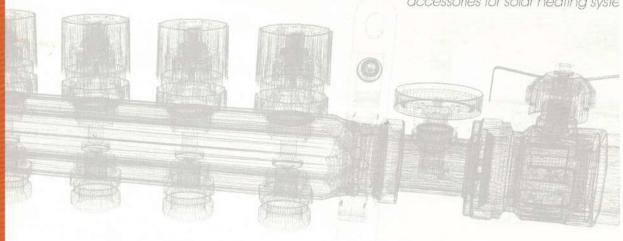


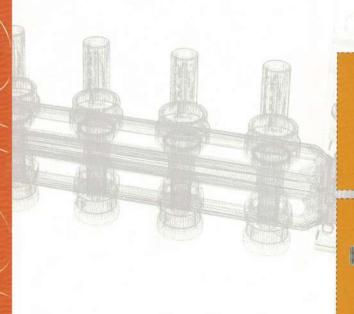







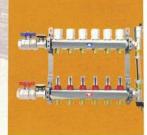

2013

# multi-fit



### THE SIMPLE, FAST AND MONEY SAVING SYSTEM FOR MULTILAYER, PEX AND POLYBUTYLENE PIPE

Supplied with an O-ring for conical seats and a washer for flat seats.- Nut in nickel-plated brass. - Maximum working pressure: 20 bar. Threads: ISO228 (equivalent to DIN EN ISO 228 and BS EN ISO 228).



Tail in brass.
Minimum and maximum working temperatures: -20°C, 110°C.

	EUROKONUS	
	14x2	
1/2" NUT	15x2,5	
14x2	16x2	
15x2,5	16x2,25	
16x2	17x2	
16x2,25	18x2	
17x2	18x2,5	
18x2	20x2	
18x2,5	20×2,25	1" NUT
20x2	20×2,5	25x2,5
20x2,25	25×2,5	26×3
20x2,5	26x3	32x3

.....



brand new

Tail in polymer. Minimum and maximum working temperatures: -20°C, 90°C.

1/2" NUT	3/4" NUT EUROKONUS	
16X2	16X2	
20X2	20X2	



entered the pipe.



The fittings are supplied with an o-ring for conical seats and a flat washer for flat seats.



### Hose bibcock, with mobile connection



#### AVAILABLE SIZE 1/2"X3/4".

PAT. PEND. **HEAVY MODEL. HIGH RESISTANCE AGAINST FREEZE.**Body in nickel-plated brass.

Hose connection in nylon.


Lever handle in alluminium.

Minimum and maximum working temperatures: -20°C, 80°C.

Threads: ISO228 (equivalent to DIN EN ISO 228 and BS EN ISO 228).



360° turn. It avoids the garden hose flattening.

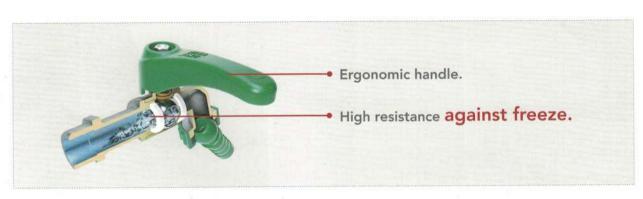



THE PUSH-FIT FITTINGS THAT BEAT EVERY RECORD. ONE SINGLE FITTING FOR THREE DIFFERENT PIPES: COPPER, PEX AND POLYBUTYLENE











SAVING OF TIME DURING THE INSTALLATION AS FAR AS 90%.

SUITABLE FOR HEATING AND SANITARY SYSTEMS

NO NEED OF SPECIAL OR EXPENSIVE TOOLS FOR THE INSTALLATION

REVERSIBLE INSTALLATION




### FOUR SIMPLE STEPS FOR A SAFE INSTALLATION


1. Cut the pipe by a rotary pipe cutter.
2. Deburr the external surface of the pipe.
3. Insert the pipe in the depth gauge and mark the pipe.
4. Insert the pipe by pushing it as far as it reaches the blocking point, that should correspond to the mark made before. If you are using cross-linked polyethylene pipes (PEX) or polybutylene pipes you have to insert the liner before the connection.

5. To disconnect the fitting you just need to push the release liner by the lever or the clip and at the same time pull the pipe.



## STAINLESS STE

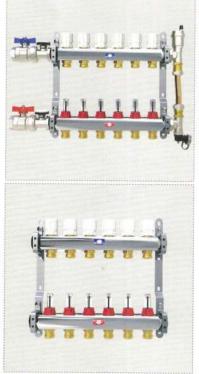

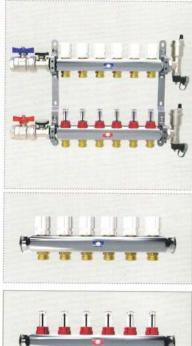






# multel-fite system

MANIFOLD WATER DISTRIBUTION SYSTEM

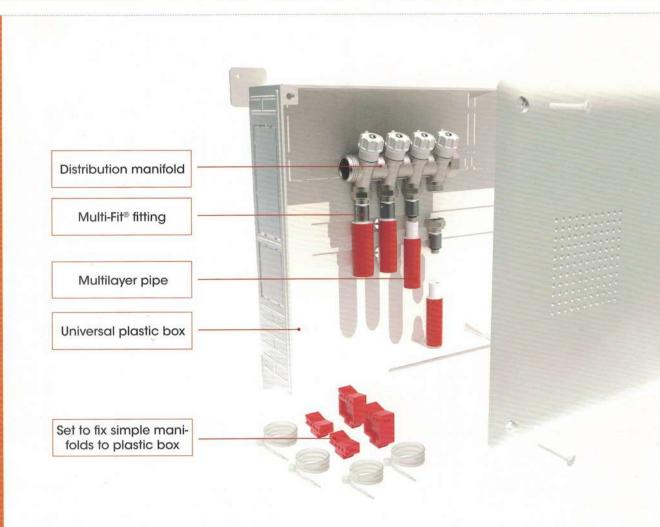

NO MORE BUILD-IN T AND ELBOW JUNCTIONS

NO MORE LEAKAGES

REALLY MAKE THE MOST OF MULTILAYER PIPING FLEXIBILITY AND INSTALLATION SPEED

IMPROVE THE WATER FLOW

MAKE REPAIRS EASY AND FAST

EACH ENDPOINT CONNECTED TO A SINGLE MANIFOLD OUTLET

### www.vosoughishop.com

دفتر مرکزی : مشهد، بین قرنی ۳۱ و ۳۳ تلفین : ه ه ه ۳۷ ۱۳ – ۱ ۵ ه

### **HEAD OFFICE**

ITAP s.p.a.
Via Ruca 19
25065 Lumezzane
Brescia (ITALIA)
Tel. 030 89270
Fax 030 8921990
www.itap.it - info@itap.it

### WAREHOUSE

ITAP s.p.a. Via Industriale 39 Zona Industriale Moie 25050 Rodengo Saiano Brescia (ITALIA)