

# NEOFLEX®

## NEOPERL®



**Tilslutningslanger**  
**Anslutningsslangar**  
**Connection hoses**

**NEOPERL®**

flow, stop and go®

[www.vosoughishop.com](http://www.vosoughishop.com)

دفتر مرکزی : مشهد، بین قرنی ۳۱ و ۳۳

تلفن : ۰۵۱ - ۳۷۱۳۳۰۰۰

**NEOPERL Nordic A/S**  
**Erhvervsparken 1**  
**Øster Bjerregrav**  
**8920 Randers NV**  
**Denmark**

**Ver. 2018.03**

**NEOPERL®**

flow, stop and go®

**NEOPERL®**

flow, stop and go®

# Welcome / Velkommen

1



## NEOFLEX® SPX (Soft pex)

- DN6 – DN8 – DN10 – DN13 – DN15
- 3/8" – 3/4"



4



## NEOFLEX® SIL

- DN8 – DN10 – DN13 – DN15 – DN20 – DN25
- 3/8" – 1"



12



## NEOPERL® EPDM

- DN10 – DN13 – DN15 – DN20 – DN25
- 3/8" – 1"



20



## NEOFLEX® EPDM

- DN10 – DN13 – DN15 – DN20 – DN25
- 3/8" – 1"



26



## NEOFLEX® BUTYL

- DN13 – DN20 – DN25
- 1/2" – 1"



38



## NEOFLEX® RPX

- DN6
- 3/8" – 3/4"



44



## NEOFLEX® PVC

- DN6 – DN10
- 1/4" – 3/4"



52



Installation-guide for flexible hoses

Installationsvejledning for fleksible slanger

55

Welcome

SPX

SIL

NEOPERL EPDM

NEOFLEX EPDM

BUTYL

RPX

PVC

Installation



NEOPERL Nordic A/S, med domicil i Øster Bjerregrav ca. 8 km vest for Randers i Danmark, producerer færdigkonfigurerede fleksible slanger i mange forskellige materialer, dimensioner og fittings-kombinationer. NEOPERL Nordic A/S er ligeledes lagerførende i NEOPERL koncernens øvrige produktsortiment.

NEOPERL Nordic A/S er en del af den tysk-schweiziske NEOPERL koncern med mere end 2000 ansatte fordelt i 18 lande jorden rundt. NEOPERL producerer innovative løsninger til sanitetsbranchen såsom luftblandere, flowregulatorer, kontraventiler, tilslutningsslanger, bruseslanger, køkkenudtrækslanger og diverters.

NEOPERL Nordic's ledelsessystem er certificeret i henhold til ISO 9001:2015 og stiller blandt andet krav til leveringssikkerhed og kvalitet, hvilket bl.a. fremgår af vores kvalitetspolitik :

NEOPERL Nordic vil sikre et højt kvalitets- og serviceniveau og definerer høj kvalitet som leverancer der tilfredsstillers kundens forventning.

Vi vil løbende arbejde med kvalitet ved at

- sætte mål for et kvalitetsniveau, som er realistisk og opnåeligt, men som løbende vil kræve forbedringer
- vil opbygge og vedligeholde rutiner, der måler realiserede resultater mod de fastsatte mål
- vil sikre at de fornødne personlige og faglige kompetencer er tilstede i virksomheden
- gennemføre målrettede indkøbsaktiviteter
- være ajour med nationale og internationale love og krav til certificering af produkter

Minimum 4 gange om året vil ledelsen foretage en vurdering af målopfyldelsen for de fastlagte kvalitetsmål og kvalitetssystemets evne til at opfylde den overordnede målsætning

Dette katalog viser nogle af de mest anvendte slangetyper og fittings-kombinationer, der anvendes på det nordiske marked. Desuden tilbyder vi kundespecifikke specialløsninger. Vores salgs- og produktions-tekniske team har mange års erfaring med håndtering af forespørgsler på specialløsninger og vi råder bl.a. over eget fletteri, som muliggør, at vi kan fremstille næsten alle tænkelige kombinationer af slangetyper og materialer til omfletning inden for ganske kort tid. Om det drejer sig om ordrer på 1 stk. eller 50.000 stk., så vil vi bestrebe os på at finde en for kunden optimal løsning. Vi tilstræber at kunne levere inden for 7 arbejdsdage fra modtagelse af ordre.

Vi modtager også gerne forespørgsler på slanger, som ikke er vist i dette katalog – kontakt os på

mail [neoperl@info.dk](mailto:neoperl@info.dk)  
eller  
telefon +45 86 45 46 44

Vores dygtige salgsteam vil efterfølgende komme tilbage med spørgsmål eller et tilbud.

Vi ser frem til at høre fra jer.

Med venlig hilsen  
Team NEOPERL Nordic A/S



NEOPERL Nordic Ø. Bjerregrav,  
Denmark



NEOPERL Nordic A/S, based in Øster Bjerregrav about 8 km west of Randers in Denmark, produces flexible hoses in a variety of materials, dimensions and fittings combinations. NEOPERL Nordic A/S is also a supplier of various product lines produced within the NEOPERL Group.

NEOPERL Nordic A/S is part of the German-Swiss NEOPERL group with more than 2000 employees working in 18 countries around the world. NEOPERL offers innovative solutions for the plumbing industry such as aerators, flowregulators, check valves, connection hoses, shower hoses, kitchen pull-out hoses and diverters.

---

NEOPERL Nordic's management system is certified in accordance with ISO 9001: 2015 and imposes, among other things, requirements for delivery security and quality, as stated in our quality policy:

NEOPERL Nordic will ensure a high quality and service level and NEOPERL Nordic defines high quality as deliveries that meet the customer's expectations.

We will continuously improve the quality by

- Setting up targets for a quality level that is realistic and achievable, but which will continuously require improvements
- implementing and maintaining routines that compare realized results with the targets set up
- ensuring that the necessary personal and professional qualifications are present in the company
- performing targeted purchasing
- being up to date with national and international laws and requirements for product certification

The targets and routines will be reviewed by the management of NEOPERL Nordic quarterly.

---

This catalogue shows some of the most common types of hose and fittings combinations used in the Nordic market. We also deliver customized special solutions. Our sales team and technical production team have many years of experience in handling requests for special solutions, and we have among other things our own braiding department, which allows us to produce almost all conceivable combinations of hoses and materials for braiding within a very short time. Whether it comes to orders for 1 pc. or 50,000 pcs. we will do our best to find the best possible solution for the customer.

We aim to deliver within 7 working days from receipt of order. We also welcome inquiries about hoses, which are not shown in this catalogue.

Please contact us per

e-mail : [neoperl@info.dk](mailto:neoperl@info.dk)

or

phone +45 86 45 46 44

Our competent sales team will then come back with questions or an offer.

We look forward to hearing from you.

Yours faithfully

Team NEOPERL Nordic A/S





## Examples of fittings



NEOFLEX® SPX are highly flexible soft pex hoses with stainless steel braiding. Excellent functional, mechanical and hygienic properties. Certified in Denmark, Norway, Sweden and Germany (among others) for use in drinking water supply systems (according to European Standard EN13618).



SPX

**Technical specifications :**

Article no.	S141	S147	S148	S241	S247	S248	S441	S541	S641
Nominal size	DN6			DN8			DN10	DN13	DN15
Inside diameter hose	Ø6,4			Ø8,2			Ø10	Ø12,7	Ø15,5
Outside diameter hose, without braiding	Ø9,0			Ø11,0			Ø13,6	17,1	Ø20,5
Braiding	Stainless steel								
PE coating	-	Transp.	Grey	-	Transp.	Grey	-	-	-
Max. work pressure	10 bar								
Max. temperature	70 °C								
Min. flow at 3 bar	16 l/min			28 l/min			45 l/min	60 l/min	96 l/min
Approvals	GDV (DK) - VA (DK)- SINTEF (N)- RISE (S) – DVGW (DE)								

**Standard fittings :**

Female elbow			Female			Tube				Male long		Male short		Male			Comp. joint						
	3/8"	1/2"	3/4"	3/8"	1/2"	3/4"	Ø8	Ø10	Ø12	Ø15	M8x1	M10x1	M8x1	M10x1	3/8"	1/2"	3/4"	Ø8	Ø10	Ø12	Ø15		
DN6				x	x		x	x			x	x	x	x	x			x	x				
DN8	x	x	x	x	x	x		x	x			x		x	x				x	x			
DN10	x	x	x	x	x	x			x							x	x					x	
DN13		x	x			x				x						x	x						x
DN15			x			x				x							x						x

(Other fittings on request)

**Applications\* :**



Wash stand



Kitchen faucet



Toilet



Health care



Washing machine



Dish washer



Refrigerator

\*For other purposes, please contact Neoperl Nordic A/S

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/8 – G12</b> : <b>Nut 3/8 – G12</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 8024 020	744600203	8190408	9306112	6522202
	30	38 8024 030	744600213	8190409	9306113	6522203
	40	38 8024 040	744600223	8190410	9306114	6522204
	50	38 8024 050	744600233	8190411	9306115	6522205
	70	38 8024 070		8190412		
	80	38 8024 080		8190413		
	100	38 8024 100		8190414		
	125	38 8024 125		8190416		
	150	38 8024 150		8190417		
	200	38 8024 200		8190418		
<b>Nut 3/8 – G12</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 8025 020	744600205	8190419	9306116	6522206
	30	38 8025 030	744600215	8190420	9306117	6522207
	40	38 8025 040	744600225	8190421	9306118	6522208
	50	38 8025 050	744600235	8190422	9306119	6522209
	70	38 8025 070	744600245	8190424	9306121	6522210
	80	38 8025 080	744600255	8190425	9306122	6522211
	100	38 8025 100	744600265	8190426	9306123	6522212
	125	38 8025 125	744600275	8190427	9306124	6522213
	150	38 8025 150	744600285	8190428	9306125	6522214
	200	38 8025 200	744600295	8190429	9306126	6522215
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 8046 020	744600204	8190391	9306127	6522224
	30	38 8046 030	744600214	8190392	9306128	6522225
	40	38 8046 040	744600224	8190393	9306129	6522226
	50	38 8046 050	744600234	8190394	9306131	6522227
	70	38 8046 070	744600244	8190395	9306132	6522228
	80	38 8046 080	744600254	8190430	9306133	6522229
	100	38 8046 100	744600264	8190432	9306134	6522230
	125	38 8046 125	744600274	8190433	9306135	6522231
	150	38 8046 150	744600284	8190434	9306136	6522232
	200	38 8046 200	744600294	8190435	9306137	6522233
<b>Nut 1/2 – G15</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 8059 020	744600207	8190436	9306138	6522245
	30	38 8059 030	744600217	8190437	9306139	6522246
	40	38 8059 040	744600227	8190438	9306141	6522247
	50	38 8059 050	744600237	8190439	9306142	6522248
	70	38 8059 070	744600247	8190440	9306143	6522249
	80	38 8059 080	744600257	8190441	9306144	6522250
	100	38 8059 100	744600267	8190442	9306145	6522251
	125	38 8059 125	744600277	8190443	9306146	6522252
	150	38 8059 150	744600287	8190444	9306147	6522253
	200	38 8059 200	744600297	8190445	9306148	6522254

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande

With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar









	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/4 – G20</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	100	38 8241 100	744600266		9306149	6522276
	125	38 8241 125	744600276		9306151	6522277
	150	38 8241 150	744600286		9306152	6522278
	200	38 8241 200	744600296		9306153	6522279
<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	50	38 8061 050	744601234	8190452	9306154	6522259
	80	38 8061 080	744601254	8190454	9306155	6522260
	100	38 8061 100	744601264	8190455	9306156	6522261
	125	38 8061 125	744601274	8190457	9306157	6522262
	150	38 8061 150	744601284	8190458	9306158	6522263
	200	38 8061 200	744601294	8190459	9306159	6522264
	250	38 8061 250				6522334
	300	38 8061 300				6522335
	350	38 8061 350				6522336
	400	38 8061 400				6522337
<b>Nut 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	80	38 8060 080		8190462	9305948	
	100	38 8060 100	744601269	8190463	9306161	6522255
	125	38 8060 125	744601279	8190464	9306162	6522256
	150	38 8060 150	744601289	8190465	9306163	6522257
	200	38 8060 200	744601299	8190466	9306164	6522258
	250	38 8060 250				6522330
	300	38 8060 300				6522331
	350	38 8060 350				6522332
400	38 8060 400				6522333	
<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	100	38 8242 100	744601266		9306165	6522280
	125	38 8242 125	744601276		9306166	6522281
	150	38 8242 150	744601286		9306167	6522282
	200	38 8242 200	744601296		9306168	6522283
<b>Elbow 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	50	38 8256 050	744602234	8190467	9306169	6522288
	80	38 8256 080	744602254	8190893	9306171	6522289
	100	38 8256 100	744602264	8190470	9306172	6522290
	125	38 8256 125	744602274	8190471	9306173	6522291
	150	38 8256 150	744602284	8190473	9306174	6522292
	200	38 8256 200	744602294	8190474	9306175	6522293





Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
 With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar

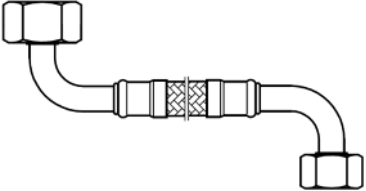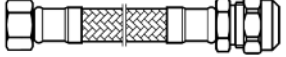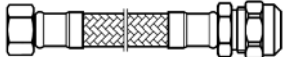

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Elbow 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	80	38 8250 080		8190477	9305949	
	100	38 8250 100	744602269	8190478	9306176	6522284
	125	38 8250 125	744602279	8190479	9306177	6522285
	150	38 8250 150	744602289	8190480	9306178	6522286
	200	38 8250 200	744602299	8190481	9306179	6522287
						
<b>Nut 3/8 – G12</b> : <b>Compress. 10 mm</b> <i>omløber / rak</i> : <i>skæring / kläm</i>	20	38 8029 020	744604203		9306181	6522216
	30	38 8029 030	744604213		9306182	6522217
	40	38 8029 040	744604223		9306183	6522218
	50	38 8029 050	744604233		9306184	6522219
						
<b>Nut 1/2 – G15</b> : <b>Compress. 10 mm</b> <i>omløber / rak</i> : <i>skæring / kläm</i>	20	38 8050 020	744604204		9306185	6522234
	30	38 8050 030	744604214		9306186	6522235
	40	38 8050 040	744604224		9306187	6522236
	50	38 8050 050	744604234		9306188	6522237
	70	38 8050 070	744604244		9306189	6522238
	80	38 8050 080	744604254		9306191	6522239
100	38 8050 100	744604264		9306192	6522240	
						
<b>Tube 10 mm</b> : <b>Compress. 10 mm</b> <i>rør / slät</i> : <i>skæring / kläm</i>	20	38 8127 020	744605203		9306193	6522265
	30	38 8127 030	744605213		9306194	6522266
	40	38 8127 040	744605223		9306195	6522267
	50	38 8127 050	744605233		9306196	6522268
	70	38 8127 070	744605243		9306197	6522269
	100	38 8127 100	744605263		9306198	6522270
125	38 8127 125	744605273		9306199	6522271	
						

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
 With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar

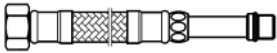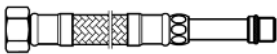


	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/8 – G12</b> : <b>Nipple M10x1</b> <i>omløber / rak</i> : <i>nippel / rak</i>	20	38 8035 020	744606203		9306201	6522220
	30	38 8035 030	744606213		9306202	6522221
	40	38 8035 040	744606223		9306203	6522222
	50	38 8035 050	744606233		9306204	6522223
						
<b>Nut 1/2 – G15</b> : <b>Nipple M10x1</b> <i>omløber / rak</i> : <i>nippel / rak</i>	20	38 8056 020	744606204		9306205	6522241
	30	38 8056 030	744606214		9306206	6522242
	40	38 8056 040	744606224		9306207	6522243
	50	38 8056 050	744606234		9306208	6522244
						
<b>Tube 10 mm</b> : <b>Nipple M10x1</b> <i>rør / slät</i> : <i>nippel / rak</i>	20	38 8175 020	744607203		9306209	6522272
	30	38 8175 030	744607213		9305951	6522273
	40	38 8175 040	744607223		9305952	6522274
	50	38 8175 050	744607233		9305953	6522275
						
<b>Nut 1/2 – G15</b> : <b>Tube 10 mm</b> <i>omløber / rak</i> : <i>rør / slät</i>	20	38 8053 020				6522341
	30	38 8053 030				6522342
	40	38 8053 040				6522343
	50	38 8053 050				6522344
	70	38 8053 070				6522345
<b>Nut 1/2 – G15</b> : <b>Tube 12 mm</b> <i>omløber / rak</i> : <i>rør / slät</i>	20	38 8062 020		8190148		
	30	38 8062 030		8190149		
	40	38 8062 040		8190150		
	50	38 8062 050		8190151		
	70	38 8062 070		8190152		
	80	38 8062 080		8190446		
	100	38 8062 100		8190447		
	125	38 8062 125		8190448		
	150	38 8062 150		8190450		
	200	38 8062 200		8190451		
						




	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 8514 020	744600404	8190895	9305954	6522294
	30	38 8514 030	744600414	8190896	9305955	6522295
	40	38 8514 040	744600424	8190897	9305956	6522296
	50	38 8514 050	744600434	8190898	9305957	6522297
	70	38 8514 070	744600444	8190899	9305958	6522298
	80	38 8514 080	744600454	8190900	9305959	6522299
	100	38 8514 100	744600464	8190901	9305961	6522300
	125	38 8514 125	744600474	8190902	9305962	6522301
	150	38 8514 150	744600484	8190903	9305963	6522302
	200	38 8514 200	744600494	8190904	9305964	6522303




<b>Nut 1/2 – G15</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	50	38 8515 050			9305944	
	80	38 8515 080			9305945	
	100	38 8515 100	744600467	8190905	9305965	6522304
	125	38 8515 125	744600477	8190906	9305966	6522305
	150	38 8515 150	744600487	8190907	9305967	6522306
	200	38 8515 200	744600497	8190908	9305968	6522307
	300	38 8515 300		8190929		



<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	50	38 8517 050	744601434	8190909	9305969	6522308
	80	38 8517 080	744601454	8190910	9305971	6522309
	100	38 8517 100	744601464	8190911	9305972	6522310
	125	38 8517 125	744601474	8190912	9305973	6522311
	150	38 8517 150	744601484	8190913	9305974	6522312
	200	38 8517 200	744601494	8190914	9305975	6522313

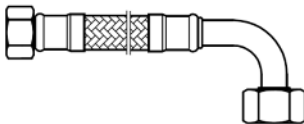


<b>Nut 3/4 – G20</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	50	38 8518 050			9305946	
	80	38 8518 080			9305947	
	100	38 8518 100	744601469	8190915	9305976	6522314
	125	38 8518 125	744601479	8190916	9305977	6522315
	150	38 8518 150	744601489	8190917	9305978	6522316
	200	38 8518 200	744601499	8190918	9305979	6522317
	300	38 8518 300		8190930		6522318
	400	38 8518 400		8190931		6522319

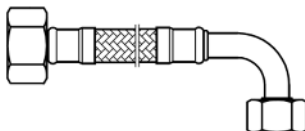





	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>ømløber / rak</i> : <i>bøjning / vinkel</i>	100	38 8529 100	744601466	8190919	9305981	6522320
	125	38 8529 125	744601476	8190920	9305982	6522321
	150	38 8529 150	744601486	8190921	9305983	6522322
	200	38 8529 200	744601496	8190922	9305984	6522323

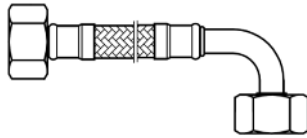

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Elbow 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	50	38 8547 050	744602434	8190923	9305985	6522324
	80	38 8547 080	744602454	8190924	9305986	6522325
	100	38 8547 100	744602464	8190925	9305987	6522326
	125	38 8547 125	744602474	8190926	9305988	6522327
	150	38 8547 150	744602484	8190927	9305989	6522328
	200	38 8547 200	744602494	8190928	9305991	6522329

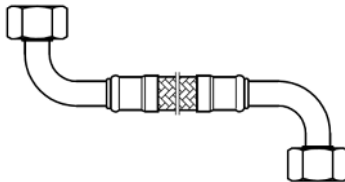



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Elbow 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	50	38 8548 050			9305937	
	80	38 8548 080			9305938	
	100	38 8548 100			9305939	
	125	38 8548 125			9305941	
	150	38 8548 150			9305942	
	200	38 8548 200			9305943	

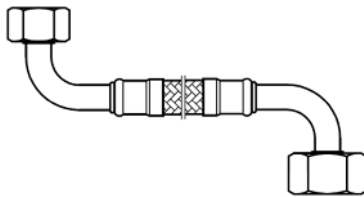

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G15</b> : <b>Tube 12 mm</b> <i>ømløber / rak</i> : <i>rør / slät</i>	20	38 8523 020				
	30	38 8523 030		8190146		
	40	38 8523 040				
	50	38 8523 050		8190147		
	70	38 8523 070				



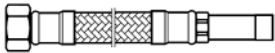

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G15</b> : <b>Tube 15 mm</b> <i>omløber / rak</i> : <i>rør / slät</i>	30	38 8607 030			9305924	
	40	38 8607 040			9305925	
	50	38 8607 050			9305926	
	60	38 8607 060			9305927	
	70	38 8607 070			9305928	
	80	38 8607 080			9305929	
						
	30	38 8664 030				
	40	38 8664 040				
	50	38 8664 050				
	60	38 8664 060				
	80	38 8664 080				
<b>Tube 15 mm</b> : <b>Tube 15 mm</b> <i>rør / slät</i> : <i>rør / slät</i>						
	30	38 8649 030			9305931	
	40	38 8649 040			9305932	
	50	38 8649 050			9305933	
	60	38 8649 060			9305934	
	80	38 8649 080			9305936	
<b>Nipple 1/2 – G15</b> : <b>Tube 15 mm</b> <i>nippel / rak</i> : <i>rør / slät</i>						
	30	38 8601 030				
	40	38 8601 040				
	50	38 8601 050				
	60	38 8601 060				
	80	38 8601 080				
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>						
	30	38 8601 030				
	40	38 8601 040				
	50	38 8601 050				
	60	38 8601 060				
	80	38 8601 080				
						

NEOFLEX® SIL are highly flexible silicone hoses with stainless steel braiding. Excellent functional, mechanical and hygienic properties. Certified in Denmark, Norway, Sweden and Germany for use in drinking water supply systems (according to European Standard EN13618).



**Technical specifications :**

Article no.	S231	S431	S531	S631	S731	S831
Nominal size	DN8	DN10	DN13	DN15	DN20	DN25
Inside diameter hose	Ø8,5	Ø9,5	Ø13	Ø16	Ø19	Ø25
Outside diameter hose, without braiding	Ø12	Ø13,5	Ø17	Ø22	Ø26	Ø34
Braiding	Stainless steel					
Max. work pressure	10 bar					
Max. temperature	90°C					
Min. flow at 3 bar	28 l/min	45 l/min	60 l/min	96 l/min	145 l/min	-
Approvals	VA (DK) – RISE (S) – SINTEF (N) – DVGW (DE)					

**Standard fittings :**

	Female elbow				Female				Tube					Male long	Male short	Male				Comp. joint				
	3/8"	1/2"	3/4"	1"	3/8"	1/2"	3/4"	1"	Ø10	Ø12	Ø15	Ø22	Ø28	M10x1	M10x1	3/8"	1/2"	3/4"	1"	Ø10	Ø12	Ø15		
DN8	x	x	x		x	x	x		x	x				x	x	x	x			x	x			
DN10	x	x	x		x	x	x			x							x	x			x			
DN13		x	x			x	x				x						x	x				x		
DN15			x				x				x							x				x		
DN20			x				x					x						x						
DN25				x				x					x						x					

(Other fittings on request)

**Applications\* :**



Wash stand



Kitchen faucet



Toilet



Health care



Washing machine



Dish washer



Refrigerator





\*For other purposes, please contact Neoperl Nordic A/S



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G15</b> :: <b>Nut 3/4 – G20</b> <i>omløber / rak</i> :: <i>omløber / rak</i>	120	36 3315 120		8192707		
	150	36 3315 150		8192708		
	200	36 3315 200		8192709		
	300	36 3315 300		8192710		
<b>Nut 1/2 – G15</b> :: <b>Nut 1/2 – G15</b> <i>omløber / rak</i> :: <i>omløber / rak</i>	20	36 3314 020		8192695		
	30	36 3314 030		8192696		
	40	36 3314 040		8192697		
	50	36 3314 050		8192698		
	70	36 3314 070		8192699		
	80	36 3314 080		8192701		
	100	36 3314 100		8192702		
	120	36 3314 120		8192703		
	150	36 3314 150		8192704		
	200	36 3314 200		8192705		
	300	36 3314 300		8192706		
<b>Nut 3/8 – G12</b> :: <b>Nipple M10x1</b> <i>omløber / rak</i> :: <i>nippel / rak</i>	20	36 3311 020				
	30	36 3311 030				
	40	36 3311 040				
	50	36 3311 050				
	60	36 3311 060				
	70	36 3311 070				
	80	36 3311 080				
	100	36 3311 100				
<b>Nut 1/2 – G15</b> :: <b>Nipple M10x1</b> <i>omløber / rak</i> :: <i>nippel / rak</i>	20	36 3323 020				
	30	36 3323 030				
	40	36 3323 040				
	50	36 3323 050				
	60	36 3323 060				
	70	36 3323 070				
	80	36 3323 080				
	100	36 3323 100				




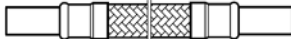

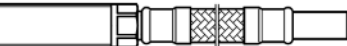


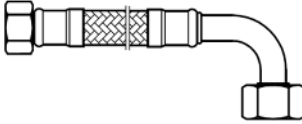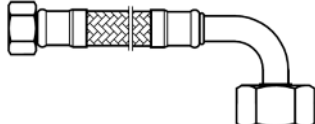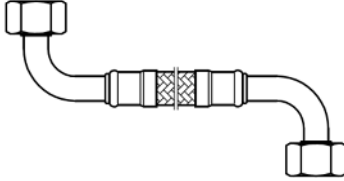	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	80	36 3317 080					
	100	36 3317 100					
	120	36 3317 120					
	150	36 3317 150					
	200	36 3317 200					
	300	36 3317 300					
	400	36 3317 400					
	<hr/>						
	<b>Nut 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	80	36 3318 080				
		100	36 3318 100				
		120	36 3318 120				
		150	36 3318 150				
200		36 3318 200					
300		36 3318 300					
	400	36 3318 400					
	<hr/>						
	<b>Elbow 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	100	36 3347 100				
		120	36 3347 120				
		150	36 3347 150				
		200	36 3347 200				
	<hr/>						
	<b>Elbow 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	100	36 3348 100				
		120	36 3348 120				
		150	36 3348 150				
200		36 3348 200					
	<hr/>						







	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	80	36 3417 080		8192711		
	100	36 3417 100		8192793		
	120	36 3417 120		8192712		
	150	36 3417 150		8192713		
	200	36 3417 200		8192714		
	300	36 3417 300		8192715		
<b>Nut 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	80	36 3418 080		8192794		
	100	34 3418 100		8192795		
	120	36 3418 120		8192716		
	150	36 3418 150		8192717		
	200	36 3418 200		8192719		
	300	36 3418 300		8192720		
400	36 3418 400		8192721			
<b>Elbow 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	80	36 3447 080		8192799		
	100	36 3447 100		8192800		
	120	36 3447 120		8192725		
	150	36 3447 150		8192727		
	200	36 3447 200		8192728		
<b>Nut 1/2 – G15</b> : <b>Tube 12 mm</b> <i>omløber / rak</i> : <i>rør / slät</i>	30	36 3423 030		8192722		
	40	36 3423 040		8192723		
	50	36 3423 050		8192724		
	60	36 3423 060		8192796		
	80	36 3423 080		8192797		
	100	36 3423 100		8192798		



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G15</b> : <b>Tube 15 mm</b> <i>omløber / rak</i> : <i>rør / slät</i> 	30	36 3512 030		8192737	9306711	
	40	36 3512 040		8192738	9306712	
	50	36 3512 050		8192739	9306713	
	60	36 3512 060		8192740	9306714	
	80	36 3512 080		8192741	9306715	
	100	36 3512 100		8192742	9306716	
	120	36 3512 120		8192743	9306717	
	150	36 3512 150		8192803	9306718	
	200	36 3512 200		8192804	9306719	
<b>Tube 15 mm</b> : <b>Tube 15 mm</b> <i>rør / slät</i> : <i>rør / slät</i> 	30	36 3589 030		8192744	9306731	
	40	36 3589 040		8192745	9306732	
	50	36 3589 050		8192746	9306733	
	60	36 3589 060		8192747	9306734	
	80	36 3589 080		8192748	9306735	
	100	36 3589 100		8192749	9306736	
	120	36 3589 120		8192750	9306737	
	150	36 3589 150		8192805	9306738	
	200	36 3589 200		8192806	9306739	
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i> 	30	36 3501 030		8192729	9306701	
	40	36 3501 040		8192730	9306702	
	50	36 3501 050		8192731	9306703	
	60	36 3501 060		8192732	9306704	
	80	36 3501 080		8192733	9306705	
	100	36 3501 100		8192735	9306706	
	120	36 3501 120		8192736	9306707	
	150	36 3501 150		8192801	9306708	
	200	36 3501 200		8192802	9306709	
<b>Nipple 1/2 – G15</b> : <b>Tube 15 mm</b> <i>nippel / rak</i> : <i>rør / slät</i>  Length of thread : 70 mm	30	36 3554 030			9306721	
	40	36 3554 040			9306722	
	50	36 3554 050			9306723	
	60	36 3554 060			9306724	
	80	36 3554 080			9306725	
	100	36 3554 100			9306726	
	120	36 3554 120			9306727	
	150	36 3554 150			9306728	
	200	36 3554 200			9306729	
	On request delivered with rosette and nut					

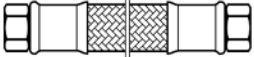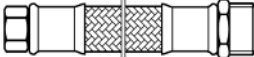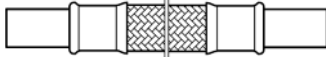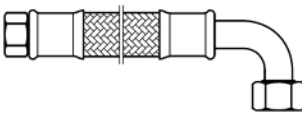

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 3/4 – G20</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	36 3601 030		8192751	9306621		
	40	36 3601 040		8192752	9306622		
	50	36 3601 050	744630036	8192753	9306623		
	60	36 3601 060		8192754	9306624		
	80	36 3601 080		8192755	9306625		
	100	36 3601 100	744630066	8192756	9306626		
	120	36 3601 120		8192807	9306627		
	150	36 3601 150		8192808	9306628		
	200	36 3601 200	744630096	8192810	9306629		
							
<b>Nut 3/4 – G20</b> : <b>Nipple 3/4 – G20</b> <i>omløber / rak</i> : <i>nippel / rak</i>		30	36 3603 030		8192757	9306641	
		40	36 3603 040		8192758	9306642	
		50	36 3603 050		8192760	9306643	
		60	36 3603 060		8192761	9306644	
		80	36 3603 080		8192762	9306645	
		100	36 3603 100		8192763	9306646	
		120	36 3603 120		8192821	9306647	
		150	36 3603 150		8192822	9306648	
		200	36 3603 200		8192823	9306649	
							
<b>Tube 22 mm</b> : <b>Tube 22 mm</b> <i>rør / slät</i> : <i>rør / slät</i>		30	36 3689 030		8192764	9306651	
		40	36 3689 040		8192765	9306652	
		50	36 3689 050		8192766	9306653	
		60	36 3689 060		8192768	9306654	
		80	36 3689 080		8192769	9306655	
		100	36 3689 100		8192770	9306656	
		120	36 3689 120		8192771	9306657	
		150	36 3689 150		8192772	9306658	
		200	36 3689 200		8192824	9306659	
							
<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>		30	36 3602 030		8192811	9306631	
		40	36 3602 040		8192812	9306632	
		50	36 3602 050		8192813	9306633	
		60	36 3602 060		8192814	9306634	
		80	36 3602 080		8192815	9306635	
		100	36 3602 100		8192816	9306636	
		120	36 3602 120		8192818	9306637	
		150	36 3602 150		8192819	9306638	
		200	36 3602 200		8192820	9306639	
							

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande

With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1 – G25</b> :: <b>Nut 1 – G25</b> <i>omløber / rak</i> :: <i>omløber / rak</i>	30	36 3701 030		8192773	9306661	
	40	36 3701 040		8192774	9306662	
	50	36 3701 050		8192776	9306663	
	60	36 3701 060		8192777	9306664	
	80	36 3701 080		8192778	9306665	
	100	36 3701 100		8192779	9306666	
	120	36 3701 120		8192826	9306667	
	150	36 3701 150		8192827	9306668	
	200	36 3701 200		8192828	9306669	
<b>Nut 1 – G25</b> :: <b>Nipple 1 – G25</b> <i>omløber / rak</i> :: <i>nippel / rak</i>	30	36 3703 030		8192780	9306681	
	40	36 3703 040		8192781	9306682	
	50	36 3703 050		8192782	9306683	
	60	36 3703 060		8192784	9306684	
	80	36 3703 080		8192785	9306685	
	100	36 3703 100		8192786	9306686	
	120	36 3703 120		8192839	9306687	
	150	36 3703 150		8192840	9306688	
	200	36 3703 200		8192841	9306689	
<b>Tube 28 mm</b> :: <b>Tube 28 mm</b> <i>rør / slät</i> :: <i>rør / slät</i>	30	36 3789 030		8192787	9306691	
	40	36 3789 040		8192788	9306692	
	50	36 3789 050		8192789	9306693	
	60	36 3789 060		8192790	9306694	
	80	36 3789 080		8192791	9306695	
	100	36 3789 100		8192792	9306696	
	120	36 3789 120		8192842	9306697	
	150	36 3789 150		8192843	9306698	
	200	36 3789 200		8192844	9306699	
<b>Nut 1 – G25</b> :: <b>Elbow 1 – G25</b> <i>omløber / rak</i> :: <i>bøjning / vinkel</i>	30	36 3702 030		8192829	9306671	
	40	36 3702 040		8192830	9306672	
	50	36 3702 050		8192831	9306673	
	60	36 3702 060		8192832	9306674	
	80	36 3702 080		8192834	9306675	
	100	36 3702 100		8192835	9306676	
	120	36 3702 120		8192836	9306677	
	150	36 3702 150		8192837	9306678	
	200	36 3702 200		8192838	9306679	



NEOPERL® EPDM are highly flexible EPDM rubber hoses with stainless steel braiding. Excellent functional and mechanical properties. Certified in Denmark, Norway and Sweden for use in technical water supply systems (according to European Standard 'EN13618').



**Technical specifications :**

Article no.	S462	S562	S662	S762	S862
Nominal size	DN10	DN13	DN15	DN20	DN25
Inside diameter hose	Ø9,5	Ø13	Ø16	Ø19	Ø25
Outside diameter hose, without braiding	Ø13,5	Ø17	Ø22	Ø26	Ø34
Braiding	Stainless steel				
Max. work pressure	10 bar				
Max. temperature	90 °C				
Min. flow at 3 bar	45 l/min	60 l/min	96 l/min	145 l/min	-
Approvals	VA (DK) – RISE (S) – SINTEF (N)				

NEOPERL EPDM

**Standard fittings :**

	Female elbow				Female				Tube				Male			Comp. joint	
	3/8"	1/2"	3/4"	1"	3/8"	1/2"	3/4"	1"	Ø12	Ø15	Ø22	Ø28	1/2"	3/4"	1"	Ø12	Ø15
DN10	x	x	x		x	x	x		x				x	x		x	
DN13		x	x			x	x			x			x	x			x
DN15			x				x			x				x			x
DN20			x				x				x			x			
DN25				x				x				x			x		

(Other fittings on request)

**Applications\* :**



Dish washer



Washing machine



Toilet

\*For other purposes, please contact Neoperl Nordic A/S

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
 With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	36 1314 020	744774020	8189959		
	30	36 1314 030	744774030	8189960		
	40	36 1314 040	744774040	8189961		
	50	36 1314 050	744774050	8189962		
	70	36 1314 070	744774070	8189963		
	100	36 1314 100	744774100	8189964		
	120	36 1314 120	744774120	8189965		
	150	36 1314 150	744774150	8189966		
	200	36 1314 200	744774200	8189967		
<b>Nut 1/2 – G15</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	100	36 1315 10001	744776100	8189968		
	125	36 1315 12501	744776125			
	150	36 1315 15001	744776150	8189969		
	200	36 1315 20002	744776200			
<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	100	36 1317 100				
	120	36 1317 120	744775120	8189970		
	150	36 1317 150	744775150	8189971		
	200	36 1317 200	744775200	8189972		
<b>Nut 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	100	36 1318 100	744777100	8189973		
	120	36 1318 125	744777120	8189974		
	150	36 1318 150	744777150	8189975		
	200	36 1318 200	744777200	8189976		
<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	100	36 1329 100	744781100			
	120	39 1329 120	744781120			
	150	36 1329 150	744781150			
	200	36 1329 200	744781200			




Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
 With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar








	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Elbow 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	100	36 1347 100	744775444			
	120	36 1347 120	744775454			
	150	36 1347 150	744775464			
	200	36 1347 200		8189977		
<b>Nut 1/2 – G15</b> : <b>Tube 12 mm</b> <i>omløber / rak</i> : <i>rør / slät</i>	30	36 1347 030		8190137	9306771	
	40	36 1347 040			9306772	
	50	36 1347 050		8190145	9306773	
	60	36 1347 060			9306774	
	80	36 1347 080			9306775	
	100	13 1347 100			9306776	
	120	36 1347 120			9306777	

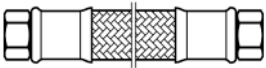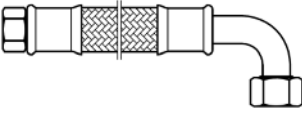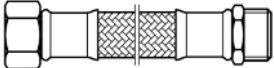

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 3/4 – G20</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	36 2301 030	347162403				
	40	36 2301 040	347162404				
	50	36 2301 050	347162405				
	75	36 2301 075	347162407				
	100	36 2301 100	347162410				
	150	36 2301 150	347162415				
	200	36 2301 200	347162420				
	<hr/>						
	<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	30	36 2303 030	347172403			
		40	36 2303 040	347172404			
		50	36 2303 050	347172405			
		100	36 2303 100	347172410			
120		36 2303 120	347172412				
150		36 2303 150	347172415				
	200	36 2303 200	347172420				
	<hr/>						
	<b>Nut 3/4 – G20</b> : <b>Nipple 3/4 – G20</b> <i>omløber / rak</i> : <i>nippel / rak</i>	30	36 2305 030	347182403			
		40	36 2305 040	347182404			
		50	36 2305 050	347182405			
		100	36 2305 100	347182410			
120		36 2305 120	347182412				
150		36 2305 150	347182415				
	200	36 2305 200	347182420				

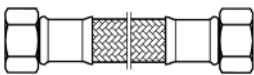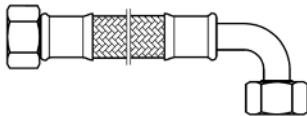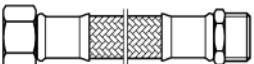

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 1 – G25</b> : <b>Nut 1 – G25</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	36 2601 030	347163403				
	40	36 2601 040	347163404				
	50	36 2601 050	347163405				
	100	36 2601 100	347163410				
							
	<b>Nut 1 – G25</b> : <b>Elbow 1 – G25</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	30	36 2602 030	347173403			
		50	36 2602 050	347173405			
		100	36 2602 100	347173410			
							
	<b>Nut 3/4 – G20</b> : <b>Nipple 3/4 – G20</b> <i>omløber / rak</i> : <i>nippel / rak</i>	30	36 2603 030	347183403			
		40	36 2603 040	347183404			
		50	36 2603 050	347183405			
100		36 2603 100	347183410				
							



NEOFLEX® EPDM are highly flexible EPDM rubber hoses with braiding (see technical specification. Excellent functional and mechanical properties. Certified in Norway for use in technical water supply systems.



**Technical specifications :**

Article no.	S400	S404	S410	S425	S500	S503	S504	S507
Nominal size	DN10				DN13			
Inside diameter hose	Ø9,5				Ø12			
Outside diameter hose, without braiding	Ø13,5				Ø17,0			
Stainless steel braiding	x	-	-	-	x	-	-	-
Galvanized braiding	-	-	-	-	-	x	-	-
Polyamid braiding	-	blue	black	white	-	-	blue	black
Colour stripe	-	-	-	red+blue	-	-	-	-
Max. work pressure	10 bar							
Max. temperature	90 °C							
Min. flow at 3 bar	45 l/min				60 l/min			
Approvals	SINTEF (N) (Expiry date : 1/1-19)							

**Standard fittings :**

	Female elbow			Female			Tube			Male long		Male short		Male			Comp. joint				
	3/8"	1/2"	3/4"	3/8"	1/2"	3/4"	Ø8	Ø10	Ø15	M8x1	M10x1	M8x1	M10x1	3/8"	1/2"	3/4"	Ø8	Ø10	Ø12	Ø15	
DN6				x	x		x	x		x		x	x								
DN8	x	x	x	x	x	x		x			x	x	x	x	x		x	x	x		
DN10	x	x	x	x	x	x									x	x					
DN13		x	x		x	x			x						x	x					x

(Other fittings on request)

**Applications\* :**



Dish washer



Washing machine



Toilet

\*For other purposes, please contact Neoperl Nordic A/S

NEOFLEX EPDM

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
 With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar

Neoflex® EPDM are highly flexible EPDM rubber hoses with braiding (See technical specification). Excellent functional and mechanical properties. Certified in Norway for use in technical water supply systems.



**Technical specifications :**

Article no.	S600	S700	S703	S704	S705	S800	S801	S803
Nominal size	DN15	DN20			DN25			
Inside diameter hose	Ø16	Ø19			Ø25			
Outside diameter hose, without braiding	Ø22	Ø26			Ø34			
Stainless steel braiding	x	x	-	-	-	-	x	-
Galvanized braiding	-	-	-	-	x	-	-	x
Polyamid braiding	-	-	blue	black	-	blue	-	-
Colour stripe	-	-	-	-	red	-	-	red
Max. work pressure	10 bar							
Max. temperature	90°C							
Min. flow at 3 bar	96 l/min	145 l/min			-			
Approvals	-							

**Standard fittings :**

	Female elbow		Female			Tube			Male		Comp. joint
	3/4"	1"	1/2"	3/4"	1"	Ø15	Ø22	Ø28	3/4"	1"	Ø15
DN15	x		x	x		x			x		x
DN20	x			x			x		x		
DN25		x			x			x		x	

(Other fittings on request)

**Applications\* :**




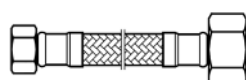
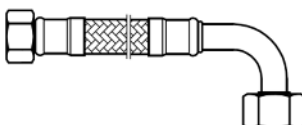
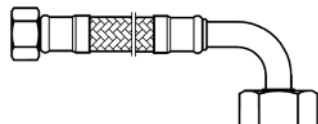

Dish washer

Washing machine

Toilet

\*For other purposes, please contact Neoperl Nordic A/S



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	36 0414 020					
	30	36 0414 030					
	40	36 0414 040					
	50	36 0414 050					
	70	36 0414 070					
	100	36 0414 100					
	120	36 0414 120					
	150	36 0414 150					
	200	36 0414 200					
	<hr/>						
	<b>Nut 1/2 – G15</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	100	36 0415 100				
125		36 0415 120					
150		36 0415 150					
200		36 0415 200					
	<hr/>						
	<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	100	36 0417 100				
		120	36 0417 120				
		150	36 0417 150				
200		36 0417 200					
	<hr/>						
	<b>Nut 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	100	36 0418 100				
		120	36 0418 120				
		150	36 0418 150				
200		36 0418 200					
	<hr/>						
	<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	100	36 0429 100				
		120	36 0429 120				
		150	36 0429 150				
200		36 0429 200					
	<hr/>						




	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Elbow 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	100	36 0447 100				
	120	36 0447 120				
	150	36 0447 150				
	200	36 0447 200				
<b>Nut 1/2 – G15</b> : <b>Tube 12 mm</b> <i>omløber / rak</i> : <i>rør / slät</i>	30	36 0419 030				
	40	36 0419 040				
	50	36 0419 050				
	60	36 0419 060				
	80	36 0419 080				
	100	36 0419 100				
120	36 0419 120					







	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/4 – G20</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	36 1701 030		8190195		
	40	36 1701 040				
	50	36 1701 050		8190196		
	60	36 1701 060		8190379		
	80	36 1701 080				
	100	36 1701 100		8190197		
	110	36 1701 110				
	120	36 1701 120				
	150	36 1701 150				
	200	36 1701 200				



<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 - G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	30	36 1702 030				
	40	36 1702 040				
	50	36 1702 050		8190198		
	60	36 1702 060				
	80	36 1702 080				
	100	36 1702 100		8190199		
	120	36 1702 120				
	150	36 1702 150		8190200		
	200	36 1702 200				



<b>Nut 3/4 – G20</b> : <b>Nipple 3/4 - G20</b> <i>omløber / rak</i> : <i>nippel/ rak</i>	30	36 1703 030		8190201		
	40	36 1703 040		8190374		
	50	36 1703 050		8190202		
	60	36 1703 060		8190375		
	80	36 1703 080		8190376		
	100	36 1703 100		8190203		
	120	36 1703 120				
	150	36 1703 150		8190377		
	200	36 1703 200		8190378		







	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Tube 22 mm</b> : <b>Tube 22 mm</b> <i>rør / slät</i> : <i>rør / slät</i>	30	36 1789 030			9306741	
	40	36 1789 040	347112404	8189943	9306742	
	50	36 1789 050		8190184	9306743	
	60	36 1789 060	347112406	8189944	9306744	
	80	36 1789 080		8190143	9306745	
	100	36 1789 100	347112410	8189945	9306746	
	120	36 1789 120		8189997	9306747	
	150	36 1789 150		8190380	9306748	
	200	36 1789 200			9306749	
	<b>Tube 22 mm</b> : <b>Tube 22 mm</b> <i>rør / slät</i> : <i>rør / slät</i>	20	36 1737 020		8192658	
40		36 1737 040		8192659		
50		36 1737 050		8192660		
60		36 1737 060		8192661		
80		36 1737 080		8192662		
100		36 1737 100		8192663		
120		36 1737 120		8192664		
150		36 1737 150		8192665		




	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/4 – G20</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	36 5901 030				
	40	36 5901 040				
	50	36 5901 050				
	60	36 5901 060				
	80	36 5901 080				
	100	36 5901 100	347162810			
	120	36 5901 120				
	150	36 5901 150	347162815			
	200	36 5901 200	347162820			






	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	30	36 5902 030				
	40	36 5902 040				
	50	36 5902 050				
	60	36 5902 060				
	80	36 5902 080				
	100	36 5902 100				
	120	36 5902 120				
	150	36 5902 150				
	200	36 5902 200				




	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/4 – G20</b> : <b>Nipple 3/4 – G20</b> <i>omløber / rak</i> : <i>nippel / rak</i>	30	36 5903 030				
	40	36 5903 040				
	50	36 5903 050				
	60	36 5903 060				
	80	36 5903 080				
	100	36 5903 100				
	120	36 5903 120				
	150	36 5903 150				
	200	36 5903 200				




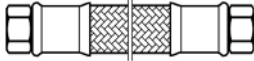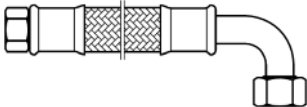


	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 3/4 – G20</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	36 6101 030	347162003	8189930			
	40	36 6101 040	347162004				
	50	36 6101 050	347162005	8189931			
	60	36 6101 060					
	80	36 6101 080					
	100	36 6101 100	347162010	8189932			
	120	36 6101 120	347162012				
	150	36 6101 150	347162015				
	200	36 6101 200	347162020				
							
<hr/>							
<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>		30	36 6102 030	347172003	8190132		
		40	36 6102 040	347172004			
		50	36 6102 050	347172005	8189933		
		60	36 6102 060		8190398		
		80	36 6102 080		8190399		
		100	36 6102 100	347172010	8189934		
		120	36 6102 120	347172012			
		150	36 6102 150	347172015	8189935		
	200	36 6102 200	347172020				
							
<hr/>							
<b>Nut 3/4 – G20</b> : <b>Nipple 3/4 – G20</b> <i>omløber / rak</i> : <i>nippel / rak</i>		30	36 6103 030	347182003	8189936		
		40	36 6103 040	347182004			
		50	36 6103 050	347182005	8189937		
		60	36 6103 060				
		80	36 6103 080				
		100	36 6103 100	347182010	8189938		
		120	36 6103 120	347182012			
		150	36 6103 150	347182015			
	200	36 6103 200	347182020	8190133			
							

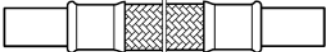


	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
Tube 22 mm : Tube 22 mm <i>rør / slät</i> : <i>rør / slät</i> 	30	36 6189 030				
	40	36 6189 040	347112004	8189939		
	50	36 6189 050	347112005	8189940		
	60	36 6189 060	347112006	8189941		
	80	36 6189 080		8190397		
	100	36 6189 100	347112010	8189942		
	120	36 6189 120				
	150	36 6189 150				
	200	36 6189 200				

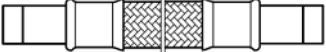Tube 22 mm : Tube 22 mm <i>rør / slät</i> : <i>rør / slät</i> 	20	36 6137 020		8192650		
	40	36 6137 040		8192651		
	50	36 6137 050		8192652		
	60	36 6137 060		8192653		
	80	36 6137 080		8192654		
	100	36 6137 100		8192655		
	120	36 6137 120		8192656		
	150	36 6137 150		8192657		







	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1 – G25</b> : <b>Nut 1 – G25</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	36 2001 030		8190185		
	40	36 2001 040				
	50	36 2001 050		8190186		
	60	36 2001 060				
	80	36 2001 080				
	100	36 2001 100		8190187		
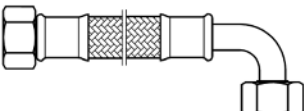
<b>Nut 1 – G25</b> : <b>Elbow 1 – G25</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	30	36 2002 030				
	40	36 2002 040				
	50	36 2002 050				
	60	36 2002 060				
	80	36 2002 080				
	100	36 2002 100				

<b>Nut 1 – G25</b> : <b>Nipple 1 – G25</b> <i>omløber / rak</i> : <i>nippel / rak</i>	20	36 2003 020		8190381		
	30	36 2003 030		8190188		
	40	36 2003 040		8190382		
	50	36 2003 050		8190189		
	60	36 2003 060		8190383		
	80	36 2003 080		8190384		
	100	36 2003 100		8190190		

<b>Tube 28 mm</b> : <b>Tube 28 mm</b> <i>rør / slät</i> : <i>rør / slät</i>	30	36 2089 030			9306761	
	40	36 2089 040		8190191	9306762	
	50	36 2089 050		8190192	9306763	
	60	36 2089 060		8190193	9306764	
	80	36 2089 080		8190144	9306765	
	100	36 2089 100		8190194	9306766	
	120	36 2089 120			9306767	
	150	36 2089 150			9306768	
	200	36 2089 200			9306769	

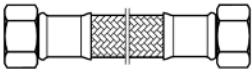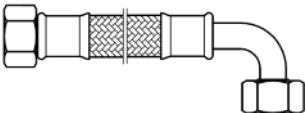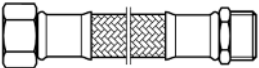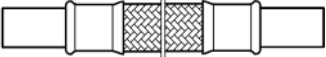

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 1 – G25</b> : <b>Nut 1 – G25</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	36 6401 030	347163003	8189946			
	40	36 6401 040	347163004				
	50	36 6401 050	347163005	8189947			
	60	36 6401 060					
	80	36 6401 080					
	100	36 6401 100	347163010	8189948			
							
	<hr/>						
	<b>Nut 1 – G25</b> : <b>Elbow 1 – G25</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	30	36 6402 030	347173003	8190134		
		40	36 6402 040				
		50	36 6402 050	347173005	8190135		
		60	36 6402 060				
80		36 6402 080					
100		36 6402 100	347173010	8190136			
							
	<hr/>						
	<b>Nut 1 – G25</b> : <b>Nipple 1 – G25</b> <i>omløber / rak</i> : <i>nippel / rak</i>	30	36 6403 030	347183003	8189949		
		40	36 6403 040	347183004			
		50	36 6403 050	347183005	8189950		
		60	36 6403 060				
80		36 6403 080					
100		36 6403 100	347183010	8189951			
							
	<hr/>						
	<b>Tube 28 mm</b> : <b>Tube 28 mm</b> <i>rør / slät</i> : <i>rør / slät</i>	30	36 6489 030				
		40	36 6489 040	347113004	8189952		
		50	36 6489 050	347113005	8189953		
		60	36 6489 060	347113006	8189954		
80		36 6489 080					
100		36 6489 100	347113010	8189955			
							



Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar



NEOFLEX® Butyl are highly flexible butyl rubber hoses with stainless steel braiding. Excellent functional and mechanical properties. Neoflex® Butyl hoses have an excellent resistance to oxygen permeability and can be used for boilers and in central heating- and solar heating-systems etc., where diffusion of oxygen is unwanted.



**Technical specifications :**

Article no.	S519	S709	S809
Nominal size	DN13	DN20	DN25
Inside diameter hose	Ø12	Ø19	Ø25
Outside diameter hose, without braiding	Ø17	Ø26	Ø34
Braiding	Stainless steel		
PE coating	-		
Max. work pressure	10 bar		
Max. temperature	90 °C		
Min. flow at 3 bar	96 l/min	145 l/min	-
Approvals	-		

**Standard fittings :**

	Female elbow			Female			Tube			Male		
	1/2"	3/4"	1"	1/2"	3/4"	1"	Ø15	Ø22	Ø28	1/2"	3/4"	1"
DN13	x	x		x	x		x			x	x	
DN20		x			x			x			x	
DN25			x			x			x			x

(Other fittings on request)

**Applications\* :**



Central heating systems







Solar heating systems

\*For other purposes, please contact Neoperl Nordic A/S

BUTYL

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
 With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar

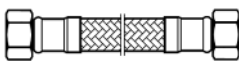


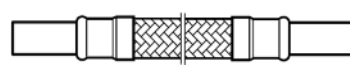	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	36 5501 020		8192537			
	30	36 5501 030		8192538			
	40	36 5501 040		8192539			
	50	36 5501 050		8192540			
	60	36 5501 060		8192541			
	80	36 5501 080		8192542			
	100	36 5501 100		8192543			
							
	<hr/>						
	<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	20	36 5502 020		8192544		
		30	36 5502 030		8192545		
		40	36 5502 040		8192546		
		50	36 5502 050		8192547		
		60	36 5502 060		8192548		
80		36 5502 080		8192549			
100		36 5502 100		8192550			
							
	<hr/>						
	<b>Nut 1/2 – G15</b> : <b>Nipple 1/2 – G15</b> <i>omløber / rak</i> : <i>nippel / rak</i>	20	36 5503 020		8192551		
		30	36 5503 030		8192552		
		40	36 5503 040		8192553		
		50	36 5503 050		8192554		
		60	36 5503 060		8192555		
80		36 5503 080		8192556			
100		36 5503 100		8192557			
							
	<hr/>						
	<b>Tube 15 mm</b> : <b>Tube 15 mm</b> <i>rør / slät</i> : <i>rør / slät</i>	20	36 5589 020		8192558		
		30	36 5589 030		8192559		
		40	36 5589 040		8192560		
		50	36 5589 050		8192561		
		60	36 5589 060		8192562		
80		36 5589 080		8192563			
100		36 5589 100		8192564			
120	36 5589 120		8192565				
							


Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
 With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar




	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/4 – G20</b> : <b>Nut 3/4 – G20</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	36 5601 020		8192566		
	30	36 5601 030		8192567		
	40	36 5601 040		8192568		
	50	36 5601 050		8192569		
	60	36 5601 060		8192570		
	80	36 5601 080		8192571		
	100	36 5601 100		8192572		
	110	36 5601 110		8192573		
	120	36 5601 120		8192574		
	150	36 5601 150		8192575		
200	36 5601 200		8192576			



<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	20	36 5602 020		8192577		
	30	36 5602 030		8192578		
	40	36 5602 040		8192579		
	50	36 5602 050		8192580		
	60	36 5602 060		8192581		
	80	36 5602 080		8192582		
	100	36 5602 100		8192583		
	120	36 5602 120		8192584		
	150	36 5602 150		8192585		
	200	36 5602 200		8192586		



<b>Nut 3/4 – G20</b> : <b>Nipple 3/4 – G20</b> <i>omløber / rak</i> : <i>nippel / rak</i>	20	36 5603 020		8192587		
	30	36 5603 030		8192588		
	40	36 5603 040		8192589		
	50	36 5603 050		8192590		
	60	36 5603 060		8192591		
	80	36 5603 080		8192592		
	100	36 5603 100		8192593		
	120	36 5603 120		8192594		
	150	36 5603 150		8192595		
	200	36 5603 200		8192596		





	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Tube 22 mm</b> <b>Tube 22 mm</b> <i>rør / slät</i> <i>rør / slät</i>	20	36 5689 020		8192597		
	30	36 5689 030		8192598		
	40	36 5689 040		8192599		
	50	36 5689 050		8192600		
	60	36 5689 060		8192601		
	80	36 5689 080		8192602		
	100	36 5689 100		8192603		
	110	36 5689 110		8192604		
	120	36 5689 120		8192605		
	150	36 5689 150		8192606		
	200	36 5689 200		8192607		


**Tube 22 mm**    **Tube 22 mm**  
*rør / slät*    *rør / slät*




20	36 5637 020		
30	36 5637 030		
40	36 5637 040	8192683	
50	36 5637 050		
60	36 5637 060	8192684	
80	36 5637 080	8192685	
100	36 5637 100	8192686	
110	36 5637 110	8192687	
120	36 5637 120	8192688	
150	36 5637 150		
200	36 5637 200		




	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1 – G25</b> : <b>Nut 1 – G25</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	36 5701 020		8192608		
	30	36 5701 030		8192609		
	40	36 5701 040		8192610		
	50	36 5701 050		8192611		
	60	36 5701 060		8192612		
	80	36 5701 080		8192613		
	100	36 5701 100		8192614		
	110	36 5701 110		8192615		
	120	36 5701 120		8192616		
	150	36 5701 150		8192617		
200	36 5701 200		8192618			



<b>Nut 1 – G25</b> : <b>Elbow 1 – G25</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	20	36 5702 020		8192619		
	30	36 5702 030		8192620		
	40	36 5702 040		8192621		
	50	36 5702 050		8192622		
	60	36 5702 060		8192623		
	80	36 5702 080		8192624		
	100	36 5702 100		8192625		
	120	36 5702 120		8192626		
	150	36 5702 150		8192627		
	200	36 5702 200		8192628		



<b>Nut 1 – G25</b> : <b>Nipple 1 – G25</b> <i>omløber / rak</i> : <i>nippel / rak</i>	20	36 5703 020		8192629		
	30	36 5703 030		8192630		
	40	36 5703 040		8192631		
	50	36 5703 050		8192632		
	60	36 5703 060		8192633		
	80	36 5703 080		8192634		
	100	36 5703 100		8192635		
	120	36 5703 120		8192636		
	150	36 5703 150		8192637		
	200	36 5703 200		8192638		





	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<p>Tube 28 mm : Tube 28 mm rør / slät : rør / slät</p>	20	36 5789 020		8192639		
	30	36 5789 030		8192640		
	40	36 5789 040		8192641		
	50	36 5789 050		8192642		
	60	36 5789 060		8192643		
	80	36 5789 080		8192644		
	100	36 5789 100		8192645		
	110	36 5789 110		8192646		
	120	36 5789 120		8192647		
	150	36 5789 150		8192648		
	200	36 5789 200		8192649		

<p>Tube 28 mm : Tube 28 mm rør / slät : rør / slät</p>	20	36 5737 020				
	30	36 5737 030				
	40	36 5737 040		8192689		
	50	36 5737 050				
	60	36 5737 060		8192690		
	80	36 5737 080		8192691		
	100	36 5737 100		8192692		
	110	36 5737 110		8192693		
	120	36 5737 120		8192694		
	150	36 5737 150				
	200	36 5737 200				

NEOFLEX® RPX are flexible PEX hoses with or without braiding (see technical specification).  
Approved for use in drinking water supply systems in Denmark, Norway and Sweden.



**Technical specifications :**

Article no.	S108	S109	S110	S112	S117
Nominal size	DN6				
Inside diameter hose	Ø6,4				
Outside diameter hose, without braiding	Ø10				
RPX without braiding, colour	-	-	-	White	Transparent
Stainless steel braiding	-	x	-	-	-
Band braiding	Chrome	-	-	-	-
Polyamid braiding	-	-	White	-	-
PVC coating	x	-	x	-	-
Max. work pressure	10 bar				
Max. temperature	90 °C				
Min. flow at 3 bar	21 l/min.				
Approvals	SINTEF (N) (expiry date : 01.07.2019) – RISE (S) (expiry date : 05.05.2020)				

**Standard fittings** (Other fittings on request) :

	Female elbow			Female			Tube	Male long	Male short	Male	Comp. joint	Brass support*
	3/8"	1/2"	3/4"	3/8"	1/2"	3/4"	Ø10	M10x1	M10x1	3/8"	Ø10	
DN6	x	x	x	x	x	x	x	x	x	x	x	x

\*Brass support – only for hoses without braiding

**Applications\* :**



Wash stand



Kitchen faucet



Toilet



Health care



Washing machine



Dish washer



Refrigerator

\*For other purposes, please contact Neoperl Nordic A/S

RPX




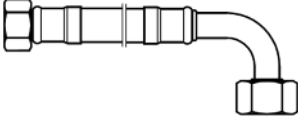
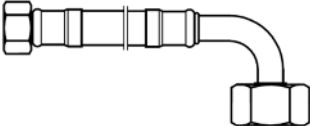
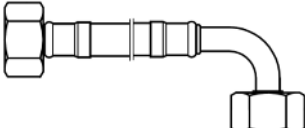
	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	38 2032 030	744788114	8189878	9306004	
	40	38 2032 040	744788124	8189879	9306005	
	50	38 2032 050	744788134	8190406	9306006	
	70	38 2032 070	744788034	8189880		
	80	38 2032 080			9306007	
	100	38 2032 100	744788144	8189881	9306008	
	120	38 2032 120			9306009	
	150	38 2032 150	744788164	8189882	9306011	
	200	38 2032 200	744788174	8189883	9306012	
	300	38 2032 300			9306013	
<b>Nut 3/8 – G12</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	30	38 2002 030	744788113	8189928	9306001	
	40	38 2002 040	744788123		9306002	
	50	38 2002 050	744788133		9306003	
<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	50	38 2035 050			9306014	
	80	38 2035 080	744788344	8189885	9306015	
	100	38 2035 100	744788244	8189886	9306016	
	120	38 2035 120	744788354	8189887	9306017	
	150	38 2035 150	744788264	8189888	9306018	
	200	38 2035 200	744788274	8189889	9306019	
	300	38 2035 300			9306021	
<b>Nut 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	50	38 2036 050			9306037	
	80	38 2036 080	744788345	8189890	9306038	
	100	38 2036 100	744788245	8189892	9306039	
	120	38 2036 120	744788355	8189893	9306041	
	150	38 2036 150	744788265	8189894	9306042	
	200	38 2036 200	744788275	8189895	9306043	
	300	38 2036 300		8189993	9306044	
	400	38 2036 400		8189992		






	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/4 – G20</b> :: <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> :: <i>bøjning / vinkel</i>	50	38 2093 050			9306053	
	80	38 2093 080			9306054	
	100	38 2093 100			9306055	
	120	38 2093 120	744788356	8189896	9306056	
	150	38 2093 150	744788266	8189897	9306057	
	200	38 2093 200	744788276	8189898	9306058	
	300	38 2093 300			9306059	
<b>Elbow 1/2 – G15</b> :: <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> :: <i>bøjning / vinkel</i>	50	38 2119 050			9306029	
	80	38 2119 080	744788544	8189899	9306031	
	100	38 2119 100	744788444	8189900	9306032	
	120	38 2119 120	744788554	8189901	9306033	
	150	38 2119 150	744788464	8189902	9306034	
	200	38 2119 200			9306035	
	300	38 2119 300			9306036	
<b>Elbow 1/2 – G15</b> :: <b>Elbow 3/4 – G20</b> <i>bøjning / vinkel</i> :: <i>bøjning / vinkel</i>	50	38 2120 050			9306045	
	80	38 2120 080			9306046	
	100	38 2120 100			9306047	
	120	38 2120 120			9306048	
	150	38 2120 150		8189994	9306049	
	200	38 2120 200			9306051	
	300	38 2120 300			9306052	
<b>Nut 3/4 – G20</b> :: <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> :: <i>bøjning / vinkel</i>	50	38 2092 050			9306022	
	80	38 2092 080			9306023	
	100	38 2092 100			9306024	
	120	38 2092 120			9306025	
	150	38 2092 150			9306026	
	200	38 2092 200			9306027	
	300	38 2092 300			9306028	




	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 2532 020	744769104				
	30	38 2532 030	744769114	8189800			
	40	38 2532 040	744769124	8189801			
	50	38 2532 050	744769134	8189802			
	100	38 2532 100	744769144	8190405			
	120	38 2532 120	744769154	8189803			
	150	38 2532 150	744769164	8189804			
200	38 2532 200	744769174	8189805				
							
	<hr/>						
	<b>Nut 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	80	38 2535 080	744769344	8189806		
		100	38 2535 100	744769244	8189807		
		120	38 2535 120	744769254	8189808		
150		38 2535 150	744769264	8189809			
200		38 2535 200	744769274	8189810			
							
	<hr/>						
	<b>Nut 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	80	38 2536 080	744769345			
		100	38 2536 100	744769245	8189811		
		120	38 2536 120	744769255	8189812		
150		38 2536 150	744769265	8189813			
200		38 2536 200	744769275	8189814			
							
	<hr/>						
	<b>Nut 3/4 – G20</b> : <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> : <i>bøjning / vinkel</i>	80	38 2593 080	744769346			
		100	38 2593 100	744769246			
		120	38 2593 120	744769256	8189816		
150		38 2593 150	744769266	8189817			
200		38 2593 200	744769276	8189818			
							



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Elbow 1/2 – G15</b> : <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	80	38 2619 080	744769544	8189819		
	100	38 2619 100	744769444	8189820		
	120	38 2619 120	744769454	8189821		
	150	38 2619 150	744769464	8189822		
	200	38 2619 200				

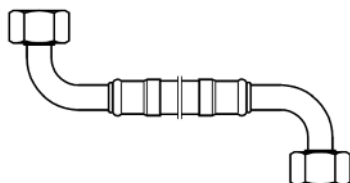

<b>Elbow 1/2 – G15</b> : <b>Elbow 3/4 – G20</b> <i>bøjning / vinkel</i> : <i>bøjning / vinkel</i>	80	38 2620 080	744769545	8189823		
	100	38 2620 100	744769445			
	120	38 2620 120	744769455	8189824		
	150	38 2620 150	744769465	8189825		
	200	38 2620 200	744769475	8189826		

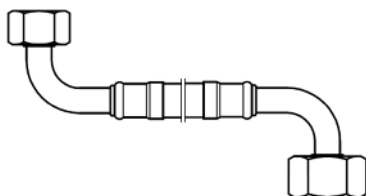

<b>Nut 1/2 – G15</b> : <b>Compress. 10 mm</b> <i>omløber / rak</i> : <i>skærring / kläm</i>	20	38 2545 020	744769605	8189827		
	30	38 2545 030	744769615	8189828		
	40	38 2545 040	744769625	8189829		
	50	38 2545 050	744769635	8189830		



<b>Nipple M10x1</b> : <b>None incl. stent</b> <i>nippel / rak</i> : <i>tom m. støttebøsning</i> <i>/tom m. stent</i>	50	38 2801 050	744797033			
----------------------------------------------------------------------------------------------------------------------------	----	-------------	-----------	--	--	--






	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/8 – G12</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 1502 020	744768103			
	30	38 1502 030	744768113	8189831		
	40	38 1502 040	744768123	8189832		
	50	38 1502 050	744768133	8189833		



<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 1532 020	744768104	8189834		
	30	38 1532 030	744768114	8189835		
	40	38 1532 040	744768124	8189836		
	50	38 1532 050	744768134	8189837		
	100	38 1532 100	744768144	8189838		
	120	38 1532 120	744768154			
	150	38 1532 150	744768164			








<b>Nut 1/2 – G15</b> : <b>Compress. 10 mm</b> <i>omløber / rak</i> : <i>skærering / kläm</i>	20	38 1545 020	744768605			
	30	38 1545 030	744768615	8189861		
	40	38 1545 040	744768625	8189862		
	50	38 1545 050	744768635	8189863		



<b>Nut 3/4 – G20</b> : <b>Compress. 10 mm</b> <i>omløber / rak</i> : <i>skærering / kläm</i>	20	38 1515 020	744768601			
	30	38 1515 030	744768611	8189859		
	40	38 1515 040	744768621	8189860		
	50	38 1515 050	744768631	8189864		



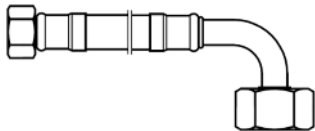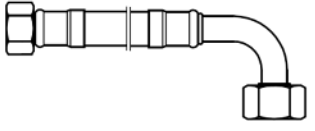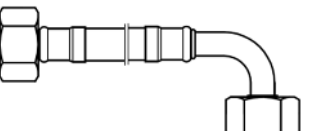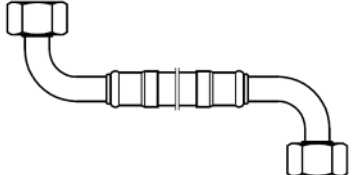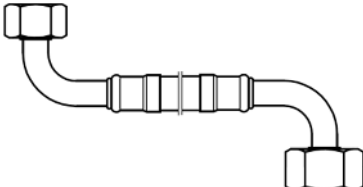

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.	
<b>Nut 1/2 – G15</b> :: <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> :: <i>bøjning / vinkel</i>	50	38 1536 050			9306074		
	80	38 1536 080	744768345	8189847	9306075		
	100	38 1536 100	744768245		9306076		
	120	38 1536 120	744768255	8189848	9306077		
	150	38 1536 150	744768265	8189849	9306078		
	200	38 1536 200	744768275	8189850	9306079		
							
	<hr/>						
	<b>Nut 1/2 – G15</b> :: <b>Elbow 1/2 – G15</b> <i>omløber / rak</i> :: <i>bøjning / vinkel</i>	50	38 1535 050	744768234	8189841	9306061	
		80	38 1535 080	744768344	8189842	9306062	
		100	38 1535 100	744768244	8189843	9306063	
		120	38 1535 120	744768254	8189844	9306064	
125		38 1535 125		8189845			
150		38 1535 150	744768264	8189846	9306065		
200	38 1535 200			9306066			
							
	<hr/>						
	<b>Nut 3/4 – G20</b> :: <b>Elbow 3/4 – G20</b> <i>omløber / rak</i> :: <i>bøjning / vinkel</i>	50	38 1593 050			9306087	
		80	38 1593 080			9306088	
		100	38 1593 100			9306089	
		120	38 1593 120	744768256	8189851	9306091	
150		38 1593 150	744768266	8189852	9306092		
200		38 1593 200	744768276	8189853	9306093		
							
	<hr/>						
	<b>Elbow 1/2 – G15</b> :: <b>Elbow 1/2 – G15</b> <i>bøjning / vinkel</i> :: <i>bøjning / vinkel</i>	50	38 1619 050	744768434	8189854	9306067	
		80	38 1619 080	744768544	8189855	9306068	
		100	38 1619 100	744768444		9306069	
		120	38 1619 120	744768454	8189856	9306071	
150		38 1619 150	744768464		9306072		
200		38 1619 200			9306073		
							
	<hr/>						
	<b>Elbow 1/2 – G15</b> :: <b>Elbow 3/4 – G20</b> <i>bøjning / vinkel</i> :: <i>bøjning / vinkel</i>	50	38 1620 050	744768435		9306081	
		80	38 1620 080	744768545	8189857	9306082	
		100	38 1620 100	744768445		9306083	
		120	38 1620 120	744768455	8189858	9306084	
150		38 1620 150	744768465		9306085		
200		38 1620 200	744768475		9306086		
							



	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/8 – G10</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 0502 020	744766103			
	30	38 0502 030	744766113	8189867	9306094	
	40	38 0502 040	744766123	8189868	9306095	
	50	38 0502 050	744766133	8189869	9306096	
<b>Nut 1/2 – G15</b> : <b>Nut 1/2 – G15</b> <i>omløber / rak</i> : <i>omløber / rak</i>	20	38 0532 020	744766104	8189870		
	30	38 0532 030	744766114	8189871	9306097	
	40	38 0532 040	744766124	8189872	9306098	
	50	38 0532 050	744766134	8189873	9306099	
	70	38 0532 070	744766034	8189874		
<b>Nut 1/2 – G15</b> : <b>Compress. 10 mm</b> <i>omløber / rak</i> : <i>skærring / kläm</i>	20	38 0545 020	744766605			
	30	38 0545 030	744766615	8189875	9306101	
	40	38 0545 040	744766625	8189876	9306102	
	50	38 0545 050	744766635	8189877	9306103	

NEOFLEX® PVC are highly flexible triple layer PVC hoses with integrated crosslinked and longitudinal reinforcement. Certified in Denmark, Norway and Sweden for use in technical water supply systems to max 25°C (See technical specifications for details).



**Technical specifications :**

Article no.	S212	S419	S420	S421	S422
Nominal size	DN6	DN10			
Inside diameter hose	Ø7,5	Ø10,0			
Outside diameter hose, without braiding	Ø12,3	Ø16,4			
Colour	White	White	Grey	White	Grey
Surface	Smooth	Smooth	Smooth	Ribbed	Ribbed
Braiding – bandwire	-	-	-	-	-
PVC coating	-	-	-	-	-
Max. work pressure	10 bar				
Max. temperature	25°C				
Min. flow at 3 bar	21 l/min	45 l/min			
Approvals	VA (DK) – SINTEF (N) - RISE (S)		SINTEF (N)(expiry date : 01.01.2019)		

**Standard fittings :**

	Female elbow			Female			Male			Female nylon	Elbow nylon	
	3/8"	1/2"	3/4"	3/8"	1/2"	3/4"	1/4"	3/8"	1/2"	3/4"	3/4"	3/4"
DN6				x	x	x		x	x			
DN10	x	x	x	x	x	x	x	x	x	x	x	x

(Other fittings on request)

**Applications\* :**



Dish washer



Washing machine



Toilet

\*For other purposes, please contact Neoperl Nordic A/S

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande  
 With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar



## PVC DN6 type S212 White

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 3/8 – G10</b> :: <b>Nut 1/2 – G15</b>	30	37 9302 030	744773030			
<i>omløber / rak</i> :: <i>omløber / rak</i>	40	37 9302 040	744773040			
	50	37 9302 050	744773050			
<b>Nut 1/2 – G15</b> :: <b>Nut 1/2 – G15</b>	30	37 9314 030	744772030			
<i>omløber / rak</i> :: <i>omløber / rak</i>	40	37 9314 040	744772040			
	50	37 9314 050	744772050			

## PVC DN10 type S420 Grå


	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
<b>Nut 1/2 – G20</b> :: <b>Elbow 3/4 – G20</b>	150	37 8233 150	744796150			
<i>omløber / rak</i> :: <i>bøjning / vinkel</i>	250	87 8233 250	744796250			
<b>Nut 3/4 – G20</b> :: <b>Elbow 3/4 – G20</b>	150	37 8371 150	744791150			
<i>omløber / rak</i> :: <i>bøjning / vinkel</i>	250	37 8371 250	744791250			
	350	37 8371 350	744791350			





## PVC DN10 type S419 White

	L [cm]	NEOPERL-nr.	VVS-nr.	RSK-nr.	NRF-nr.	LVI-nr.
Nut 1/2 – G20	150	37 8033 150				
omløber / rak	250	37 8033 250	744779250			
Elbow 3/4 – G20	350	37 8033 350				
bøjning / vinkel						



# Installation

## UK: Installation Rules for flexible hoses

## DK: Installationsregler for fleksible slanger

## S : Installationsanvisning för anslutningsslangar

When mounting flexible connection hoses from NEOPERL Nordic A/S a few basic rules must be followed to ensure a safe and durable connection.

### Keeping and transport

- Leave the connection hose in the original packing until installation
- Avoid clamping and breaking the flexible hose during transport

### Before the mounting

- The scope of application of the connection hose must be according to the installation planned
- Use the correct tools. Use appropriate open end spanner. Do not use pipe wrench or similar

### During mounting

- Install the flexible connection hose so that torsion, breaking and stretching of the hose is avoided
- Install the flexible connection hose, so that physical stress is avoided, e.g. wear and tear of the surface of the hose
- The hose may not be installed in strongly corrosive environments

### After mounting

- Test the tightness of the hose before start using the product
- The hose must be mounted accessible for following inspection

Ved montage af fleksible koblingsledninger fra NEOPERL Nordic A/S er der få enkle grundregler, som bør følges, herved opnås en sikker og langtidsholdbar tilslutning.

### Opbevaring og transport

- Lad koblingsledningen blive i original emballage indtil ledningen skal monteres
- Undgå klemning og knækning af koblingsledningen under transport

### Forud for montering

- Koblingsledningens anvendelsesområde skal være i overensstemmelse med den påtænkte installation
- Brug korrekt værktøj. Anvend passende fastnøgler og ikke rørtænger eller lign.

### Under montage

- Monter den fleksible koblingsledning så vridning, knækning og strækning af slangen undgås
- Koblingsledningen skal være monteret sådan at fysisk påvirkning undgås f.eks. i form af slitage af ledningens overflade
- Slangen må ikke monteres i stærkt korrosive miljøer

### Efter installation

- Tæthedsprøv den monterede slange inden den tages i brug
- Slangen skal være monteret lettilgængeligt for efterfølgende tilsyn

Vid montage av flexibla anslutningsslangar från NEOPERL Nordic A/S är det några enkla grundregler som bör följas för att erhålla en säker och hållbar anslutning.

### Förvaring och transport

- Låt anslutningsslangen vara kvar i originalförpackningen tills monterat skall ske
- Undvik klämning och knäckning av anslutnings slangen under transport

### Före montering

- Slangens användningsområde ska överensstämma med den tilltänkta installationens användningsområde

### Under montering

- Använd fasta nycklar, undvik rørtænger o. d.
- Montera anslutningsslangen så att vridning, knäckning och sträckning av slangen undviks
- Anslutningsslangen ska vara monterad på sådant vis att mekanisk nötning undviks
- Montering av anslutningsslangen får ej ske i starkt korrosiva miljöer
- Anslutningsslangen ska i hela sin längd vara belägen i samma rum
- Avstängningsventil ska monterats före anslutningsslangen


### Efter montering

- Täthetsprovning av den monterade anslutningsslangen ska ske före idrifttagning
- Anslutningsslangen ska vara monterad på sådant vis att den enkelt kan inspekteras



Control of climbing  
Kontrol af klemkappe  
Kontroll av hylsor



No mounting  
Ingen montering





Mounting OK  
Montering OK

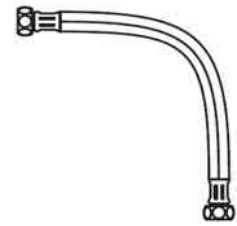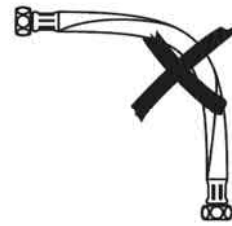



Avoid turning of the hose  
Undgå at vride slangen  
Undvik att vrida slangen.



The hose may not be stretched completely  
Slangen må ikke strækkes helt ud  
Anslutningsslangen får inte monterats helt utsträckt

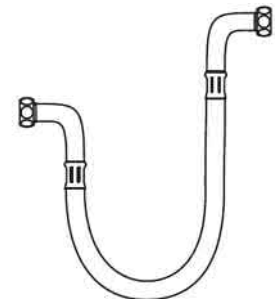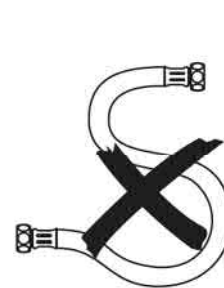

The hose may not have a S-shaped bend  
Slangen må ikke få et S-formet bøj  
Anslutningsslangen får inte monterats som ett S

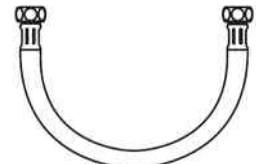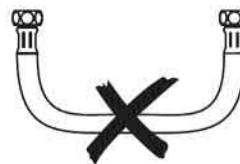

The hose must have a soft bend  
Slangen skal have en blød bue  
Anslutningsslangen ska ha en mjuk bøj

Illustrations are only intended as a guide / Illustrationer er kun vejledende / Illustrationerna är endast vägledande

With reservations of errors and changes of any kind / Forbehold for trykfejl og ændringer af enhver art / Vi reserverar oss eventuella tryckfel och ändringar

# Overblik / Overview

## NEOFLEX® SPX (Soft pex)



- DN6 – DN8 – DN10 – DN13 – DN15
- 3/8" – 3/4"



Håndvask  
Servant  
Tvättställ  
Washstand



Køkken  
Kjøkkenvask  
Diskbänk  
Kitchen faucet



Toilet  
Toalett  
Toalett  
Toilet



Sygepleje  
Sykepleie  
Omvårdnad  
Health care



Tørvask  
Vaskemaskin  
Tvättmaskin  
Wash. machine



Opvask  
Opvaskmaskin  
Diskmaskin  
Dish washer



Isterninger  
Kjøleskap  
Kyl  
Refrigerator

## NEOFLEX® SIL(Silikone)



- DN8 – DN10 – DN13 – DN15 – DN20 – DN25
- 3/8" – 1"



Håndvask  
Servant  
Tvättställ  
Washstand



Køkken  
Kjøkkenvask  
Diskbänk  
Kitchen faucet



Toilet  
Toalett  
Toalett  
Toilet



Sygepleje  
Sykepleie  
Omvårdnad  
Health care



Tørvask  
Vaskemaskin  
Tvättmaskin  
Wash. machine



Opvask  
Opvaskmaskin  
Diskmaskin  
Dish washer



Isterninger  
Kjøleskap  
Kyl  
Refrigerator

## NEOFLEX® BUTYL



- DN13 – DN20 – DN25
- 1/2" – 1"



Solvarme  
Solvärme  
Solvärme  
Solar



Central-varme  
Sentralvarme  
Centralvärme  
Central heating

## NEOFLEX® EPDM



- DN10 – DN13 – DN15 – DN20 – DN25
- 3/8" – 1"



Toilet  
Toalett  
Toalett  
Toilet



Tørvask  
Vaskemaskin  
Tvättmaskin  
Wash. machine



Opvask  
Opvaskmaskin  
Diskmaskin  
Dish washer

## NEOFLEX® RPX



- DN6
- 3/8" – 3/4"



Håndvask  
Servant  
Tvättställ  
Washstand



Køkken  
Kjøkkenvask  
Diskbänk  
Kitchen faucet



Toilet  
Toalett  
Toalett  
Toilet



Sygepleje  
Sykepleie  
Omvårdnad  
Health care

## NEOFLEX® PVC



- DN6 – DN10
- 1/4" – 3/4"



Toilet  
Toalett  
Toalett  
Toilet



Tørvask  
Vaskemaskin  
Tvättmaskin  
Wash. machine



Opvask  
Opvaskmaskin  
Diskmaskin  
Dish washer

## NEOFLEX® EPDM (godkendt approved)



- DN10 – DN13 – DN15 – DN20 – DN25
- 3/8" – 1"



Toilet  
Toalett  
Toalett  
Toilet



Tørvask  
Vaskemaskin  
Tvättmaskin  
Wash. machine



Opvask  
Opvaskmaskin  
Diskmaskin  
Dish washer

**NEOPERL®**

flow, stop and go®

[www.vosoughishop.com](http://www.vosoughishop.com)